AUREON7.1USB

Configuration Guide Windows XP





TERRATEC

Configuration Guide TERRATEC Aureon 7.1 USB in Windows XP

For the installation of the Aureon 7.1 USB are two steps necessary:

- 1. The automatic installation of a generic USB driver.
- 2. The control panel installation from the software CD.
- 1.) As soon as you connect the Aureon with your PC, Windows XP installs a generic USB driver onto your system.



When the installation is done, please check in the Device-Manager if Windows 7 recognized the Soundcard and installed it under Sound, Video and Game Controllers as "TERRATEC Aureon 7.1 USB".

🖶 Device Manager	
File Action View Help	
🗄 🖢 Modems	~
🕀 😼 Monitors	
🗄 🎒 Network adapters	
🕀 🦔 Processors	
🗄 🖑 SCSI and RAID controllers	
🕀 👼 Secure Digital host controllers	
😑 🧐 Sound, video and game controllers	
- 🧐 Legacy Video Capture Devices	
🕀 🚽 System devices	
🕀 🖙 Universal Serial Bus controllers	*

In order to use all connected Speakers, you have to make a few more settings as shown below!

/olume	Sounds	Audio	Voice	Hardware	
Sound	лаураск				
O,	Default dev	Default device:			
	Aureon 7.1 USB			*	
	ſ) (= hum		A shuren a sal	
	l	volum	e	Advanced.	
Sound	ecording				
Þ	Default device:				
1	Auroon 7.1	1100.			
	Aureon 7.1	030			•
	ſ	Volum	e	Advanced.	
MIDI mu	isic playback				
1	Default dev	ice:			
	Microsoft G	iS Wavetabl	e SW Synth	ו	~
		Volum	е	About	
	l				

The "Aureon 7.1 USB" has to be set as "Default device". If this is done, click on "Advanced" at the "Volume"-Tab to enable the 7.1 surround functionality.

Advanced	Audio Properties	?X			
Speakers	Performance Effects				
Ø,	Select the speaker setup that is most like the setup you have on your computer.				
you computer.					
	Speaker setup: 7.1 home theater speakers				
		pply			

Choose "7.1 home theatre speakers" and then "OK"! Now the configuration is done. You will get back to the Sound Menu!

TERRATEC 💮

In order to use the Aureon 7.1 USB as your default record device, you have to follow the next steps shown below. (This applies to both microphone inputs).

Sounds an	d Audio Devices Properties	?×		
Volume	Sounds Audio Voice Hardware			
Sound	playback			
Ø,	Default device:			
~	Aureon 7.1 USB	*		
	Volume Advanced			
Sound	recording			
R	Default device:			
C Th	Aureon 7.1 USB	*		
	Volume Advanced			
-MIDI mu	usic playback			
r 🖷	Default device:			
inter	Microsoft GS Wavetable SW Synth	*		
	Volume About			
Use only default devices				
	OK Cancel Ap	ply		

Here you have to set the Aureon 7.1 USB as default device for recording. When the Aureon is set as default, click on "Volume" to proceed!

🔢 Recording Control				
Options Help				
SPDIF In	Stereo Mix	Microphone	Line In	Wave
Balance:	Balance:	Balance:	Balance:	Balance:
Volume:	Volume:	Volume:	Volume:	Volume:
Select	Select	Select	Select	Select

In this window you have the option to choose the Mic-, Line In- and SPDIF-Volume level.

At this point you can close all open windows, the configuration is completed. You can now go on with the next step of the installation.

Please note: To use the soundcard you have to go to step 2, without this, there is no output on the Aureon 7.1 USB.

We now get to the final step, the installation of the control panel:

2.) For full functionality, please install the control panel, which you find in the start-up of the included software CD. If that does not launch automatically, please run the "auto-run.exe" from the software CD.

After the successful installation of the control panel you have to restart your system. Please follow the instructions of the installation routine.